

**MS
SERIES**

CABINETS MODULAIRES MODULAR CABINETS

Guide d'installation — Installation Guide



1/2"



1/2"




1/2"

Qt.	Description
2 x	Ancrage à vis 1/2 x 4" 1/2 x 4" Screw anchor
4 x	Pied de nivellement (Sauf 60" H) Levelling feet (Except 60" H)



- Lire les instructions avant utilisation.
- Ne pas ouvrir plusieurs tiroirs à la fois
- Toujours ancrer l'unité avant de l'utiliser
- Ne pas surcharger les tiroirs.
- Verrouillez les portes et les tiroirs avant de déplacer.
- Afin de maintenir le bon fonctionnement du mécanisme de verrouillage, incliner légèrement le cabinet vers l'arrière lors de l'installation.
- Utiliser selon les recommandations du manufacturier

- Please read instructions carefully before using.
- Do not open multiple drawers at once
- Always anchor the unit before use
- Do not overload drawers.
- Lock drawers and doors before moving.
- The cabinet must be slightly tilted to the back to ensure a good operation of the locking mechanism.
- Use according to the manufacturer's recommendations

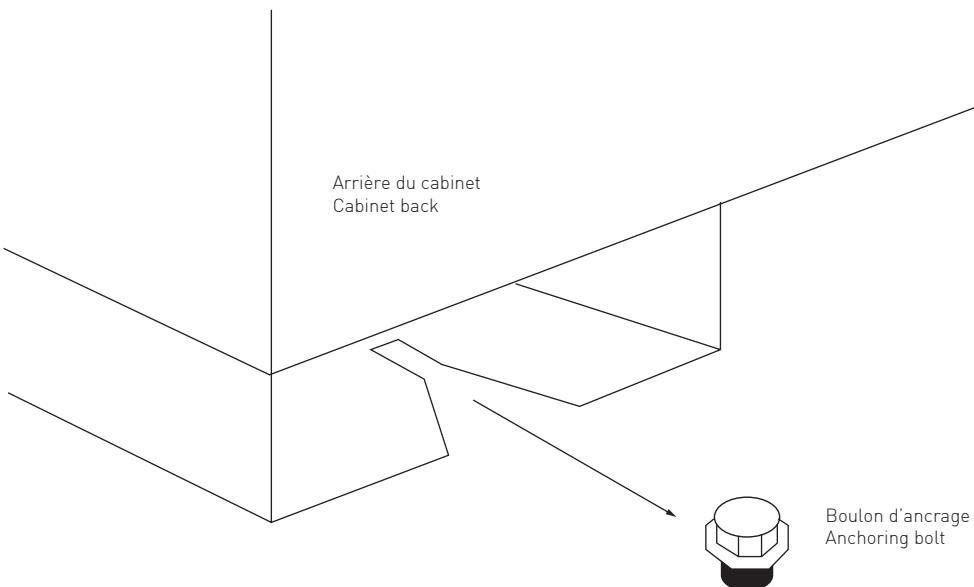

Instructions d'ancreage :

- 1- Mesurer les points de perçage des ancrages
- 2- Pré-percer à 5" de profond avec la perceuse marteau et la mèche 1/2"
- 3- Insérer l'ancre avec la perceuse à percussion.
Laisser l'espace requis pour glisser le cabinet (1/8")
- 4- Glisser le cabinet dans sa position finale

Anchoring instructions:

- 1- Measure the position of the anchors
- 2- Pre-drill 5" deep holes with the hammer drill and 1/2" bit
- 3- Insert the anchors with the impact drill.
Leave the space needed to slide the cabinet into place (1/8")
- 4- Slide the cabinet into its final position

Disponible en version électronique au metalia.com/fr/telechargements • Available in PDF format at metalia.com/downloads

© 2016 Metalia® Tous droits réservés / All rights reserved / Todos los derechos reservados